



External dimension diagram

MG-04※

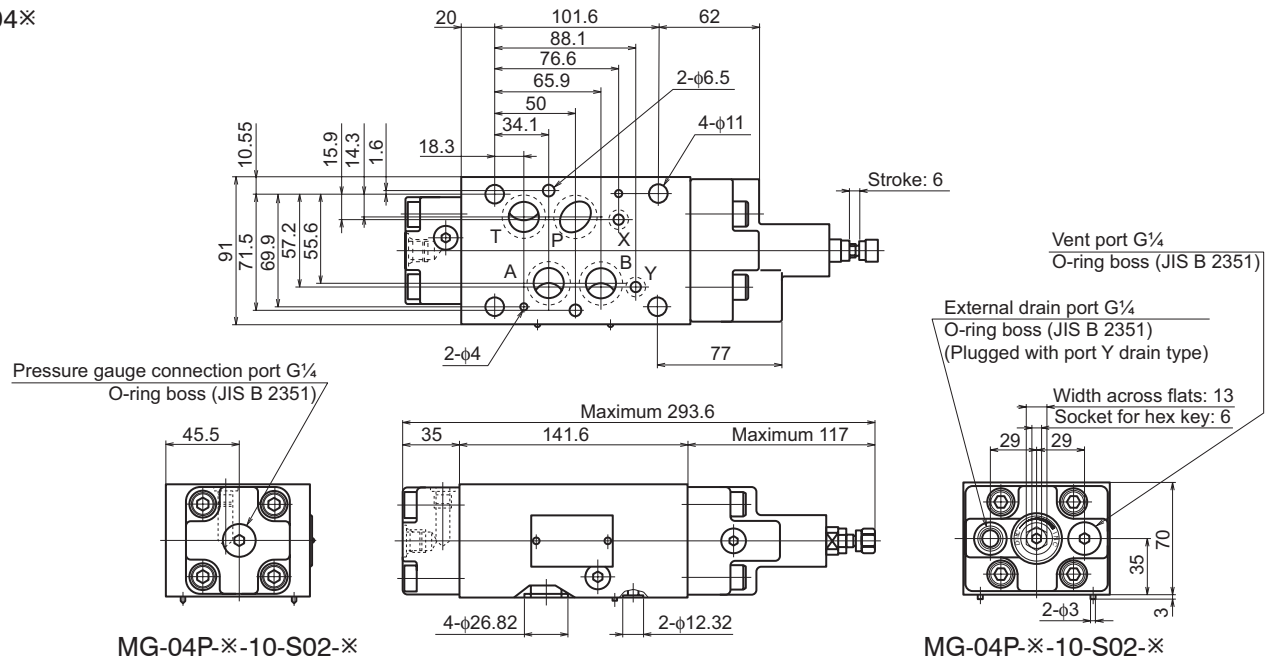


MG-04P-※-10-S02-※

MG-04P-※-10-S02-※

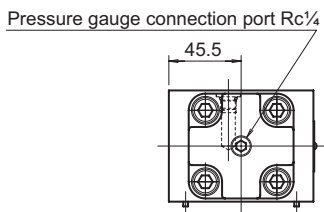


MG-04P-※-10-R02-※

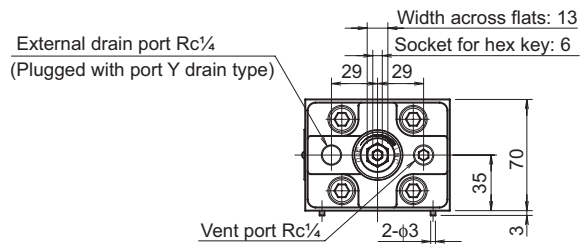

MG-04P-※-10-R02-※

Sectional structural diagram


MG-04※

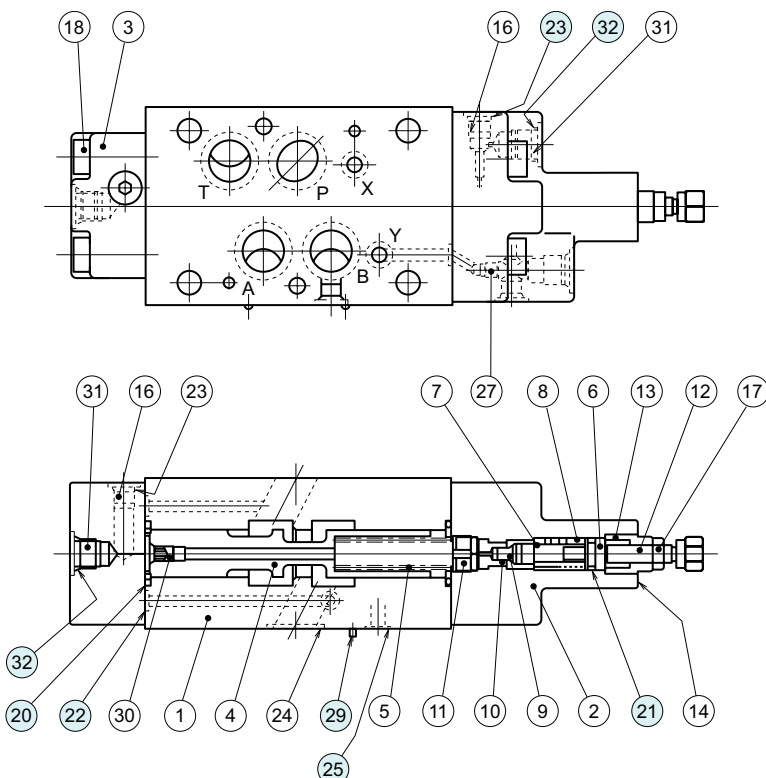

Drain type setting guide

To change the external drain type to the port Y drain type, remove the hexagon socket plug (part No. 27) and fit a plug (R¼ plug for R02 or G¼ hexagon socket thread plug with flange and O-ring 1BP11 for S02) to the external drain port.

Changing the control port

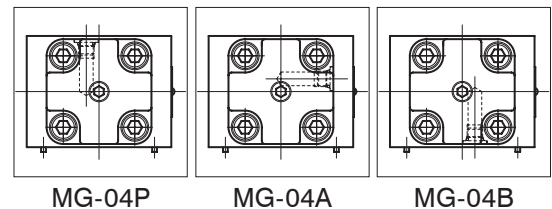

Sealing part table

Part No.	Name	Quantity	Part specifications
20	O-ring	2	JIS B 2401 1B G25
21	O-ring	1	JIS B 2401 1A P11
22	O-ring	4	JIS B 2401 1B P7
23	O-ring	4	JIS B 2401 1B P8
24	O-ring	4	AS568-118 (NBR, HS90)
25	O-ring	2	AS568-012 (NBR, HS90)
32	O-ring	2	JIS B 2401 1B P11