https://www.daikinpmc.com/en/

For latest information, PDF catalogs and operation manuals

Stop Valve for Pressure Gauges



Features

 Installation of this valve enables replacement of the pressure gauge, due to it being damaged for example, without stopping all the equipment.
It is also possible to prolong the service life of the pressure gauge by closing the valve except when pressure measurement is required.

Nomenclature



1 Model No.

(Applicable fluids: petroleum-based hydraulic oils)

×

4

GV: Stop valve

2 Fluid flow direction

A: Straight

G: Right angle

3 Inlet side piping port

2: Rc1/4

3: Rc3/8

4 Outlet side piping port


2: Rc1/4

3: Rc3/8


Specifications

Model code	Maximum operating pressure MPa {kgf/cm²}	Mass kg
GV-*22	21 {210}	0.4
GV-*33		

External dimension diagram

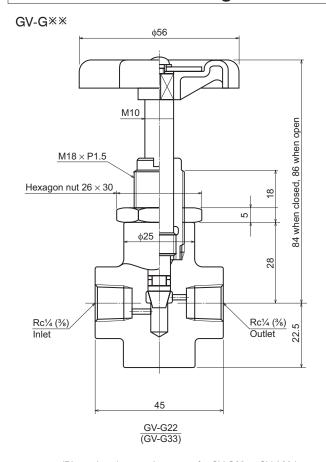

GV-A**

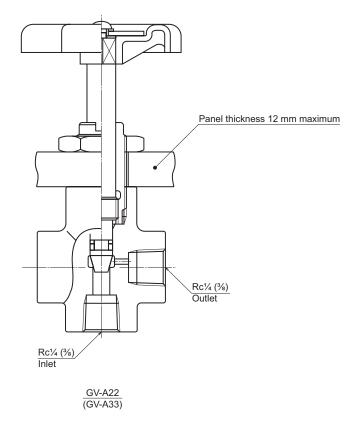

(Dimensions in parentheses are for GV-G33 or GV-A33.)